



Specification Sheet: 56796A, 56783A, 56784A, 56797A


Compact® Side-by-Side Tissue Dispenser

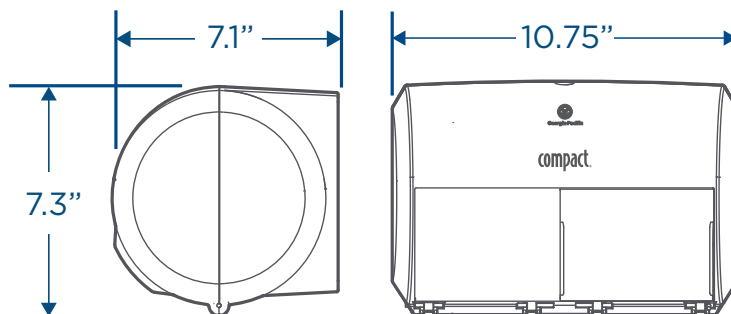

Installation

- 1 Affix a mounting bracket (#54019 sold separately) with the arrow on the brackets pointing to the **left or right**, ensure that the top is level before securing the mounting bracket to wall with two anchored screws using the keyhole slots. Mounting should comply with ADA guidelines. Compliance is the responsibility of the installer.
- 2 With the front cover open, press unit onto mounting bracket and slide the dispenser to the left or right to engage the hooks on the mounting bracket as indicated. Close the cover.

 Numerous holes and slots have been molded into the back of the dispenser housing if direct-to-wall mounting is desired.

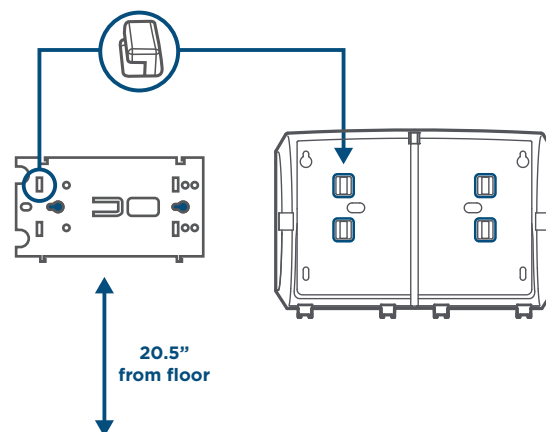

Operation

This tissue dispenser utilizes coreless tissue rolls available at GPPRO.com. The dispenser's cover hinges at the bottom and opens a full 180 degrees. An internal mechanism incorporated into the dispenser door prevents access to the second roll before the first roll is depleted. This feature helps to reduce waste by preventing the partial use of rolls. For questions regarding this dispenser or for replacement parts, please call: 1-866-HELLOGP (1-866-435-5647). www.gppro.com

Specifications

COLORS	56796A (shown): Stainless finish with stainless finish slide door.	MODEL/ SKU NUMBER	Stainless Finish: 56796A
	56784A: Black with translucent gray slide door.		Black: 56784A
	56797A: White with translucent gray slide door.		White: 56797A
	56783A: Light gray with translucent blue slide door.		Gray: 56783A
FINISH	Main body light texture. Sliding door gloss finish.	MANUFACTURER	GP PRO
ACCESS	Keyed at cover top (key included). Replacement key: 50504 Key bypass twist-to-open insert available: 50429	DIMENSIONS	10.75"W x 7.3"H x 7.2"D
		WEIGHT	SF: 1.62lbs Plastic: 1.58lbs